

QUALI-HIGH-FLOW

HIGH-FLOW PLEATED CARTRIDGE



EN Data sheet



Recycled polypropylene

Polyester

Food-grade polypropylene



Features & Benefits

- Wide range of media and filter materials with porosities between 0.2µm and 100µm
- 100% welded and reinforced design
- High retention capacity thanks to its design (draining grids, multi-layers, etc.)
- Low pressure losses
- Contains no surfactants, binders, adhesives or silicone

Standard dimensions

External diameter	152 mm
Internal diameter	72 mm
Lengths	20" - 40" - 60"

Description

QUALI-HIGH-FLOW cartridges are pleated filter elements of the high flow type.

The large filtering surface combined with the high porosity media provide the QUALI-HIGH-FLOW cartridge with minimal pressure drops and excellent retention capacities.

QUALI-HIGH-FLOW cartridges are assembled by heat welding (without glue) in order to guarantee maximum chemical compatibility and to avoid the risks of contamination. Resistance to pressure and temperature is improved by the injection moulded outer cage. Unlike existing technologies, this design provides the cartridge with greater rigidity and avoids any deformation of the cartridge in the support basket. There is no difficulty in removing the cartridge once it is clogged.

The QUALI-HIGH-FLOW cartridge incorporates a mesh spacer upstream and downstream of the filter media to ensure the pleats are spaced apart. This design increases the life of the cartridge while maximising filtration flow.

Building materials

Code	Material	Max. operating temperature	Application
QTPR	Recycled polypropylene	70°C	Reducing carbon impact
QTP	Food-grade polypropylene	70°C	FDA food application
QTPE	Polyester	110°C	High temperature and solvent

Range of filter media available

Code	Material	Description
PP	Polypropylene (single-layer pleat pack)	Standard version with maximum filter surface
PPX	Polypropylene (multi-layer pleat pack)	Thicker configuration for longer service life
PE	Polyester	High temperature and solvent application
GF	Borosilicate micro-fiberglass with polyester support	Industrial applications
GFF	Borosilicate micro-fiberglass with polypropylene support	FDA food application
GFF+	Nanoalumina fibers and micro-fiberglass with polyester support	Increased filtration efficiency with nanoalumina - Food FDA

Consult us for chemical compatibility

Terms of service

Maximum pressure loss	3 bar
Recommended replacement pressure differential	2 bar



Recycled polypropylene

Polyester



Food-grade polypropylene

ORDER REFERENCE

Example :



A / Building materials

Code	Description
QTPR	Recycled polypropylene
QTP	Food-grade polypropylene
QTPE	Polyester

B / Filter media

Code	Description
PP	Polypropylene (single-layer pleat pack)
PPX	Polypropylene (multi-layer pleat pack)
PE	Polyester
GF	Borosilicate micro-fiberglass with polyester support
GFF	Borosilicate micro-fiberglass with polypropylene support
GFF+	Nanoalumina fibers and micro-fiberglass with polyester support

C / Removal ratings

Code	Filtration efficiencies ¹		Materials					
	90%	99,9%	PP	PPX	PE	GF	GFF	GFF+
05	0,2 µm	0,5 µm	•	•				•
1	0,5 µm	1 µm	•	•			•	•
3	1 µm	3 µm	•	•				
5	3 µm	5 µm	•	•	•			
10	5 µm	10 µm	•	•				
20	10 µm	20 µm	•			•		
35	20 µm	35 µm	•					
50	25 µm	50 µm	•			•		
90	50 µm	90 µm	•					

¹ Filtration efficiencies are determined in a single pass according to the modified NFX45-303 test protocol in the laboratory under high-flow operating conditions.

D / Lengths


Code	Description
20	20" (527 mm)
40	40" (1033 mm)
60	60" (1538 mm)

E / Seal materials


Code	Description
N	NBR
E	EPDM
EA	EPDM FDA
F	FPM

Typical flow rates :

Pressure drops for filtration media only

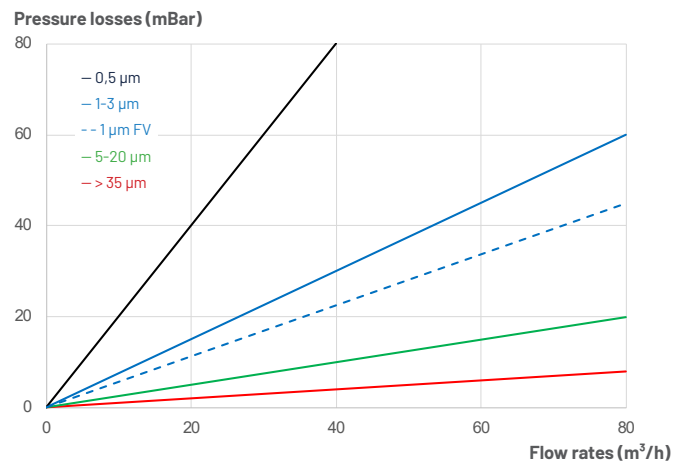

Pressure losses for a 40" cartridge²

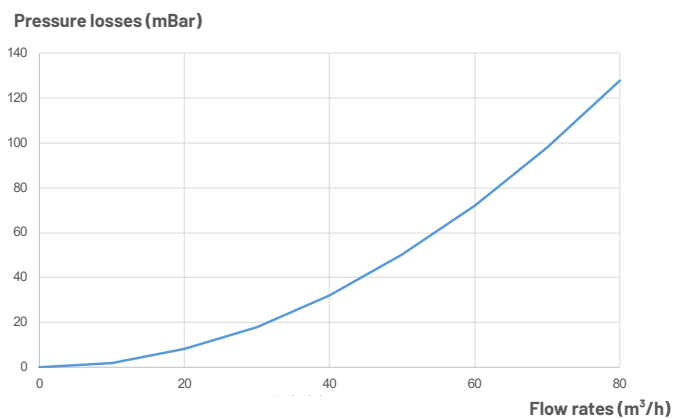

²Typical initial pressure drop ΔP per 40" element, water at 20°C, viscosity 1cP.

